DUOLET

Manufacturing Company, Inc.

OPERATORS MANUAL AND PARTS BOOK



MODEL: ST3-80K-SSA SEMI NURSE TRAILER

Read and understand this manual. This manual provides information and procedures to safely operate and maintain the **Semi Nurse Trailer**.





DUO LIFT Manufacturing Company, Inc.

Warranty

This is to certify that we warrant to the original purchaser equipment manufactured by Duo Lift Manufacturing Company, Inc., identified and recorded by serial number, to be free of defects in material and workmanship under normal use and service to replace, free of cost, to the original purchaser any part or parts of said equipment that in our judgement shows evidence of such defects; and provide further that the said part or parts shall be returned to the factory, freight prepaid, within five years of shipping date. Manufacturer agrees to replace or repair during this period of no charge any defective part or parts returned to the factory, and deemed defective by authorized factory inspection. Should it become impractical to return said parts to the factory, the manufacturer shall not be liable for any labor costs, or any other costs encountered, in repairing or replacing any part or parts involved, but will be obligated to supply only the necessary repair and/or replacement items.

Duo Lift Manufacturing Company, Inc., as the manufacturer shall not be liable for any other damage, whether direct or consequential.

No representative or other person is authorized or permitted to make any other warranty or assume for his company any liability not strictly in accordance with the foregoing. This limited warranty is in lieu of all warranties expressed or implied and of all other obligations on the part of the factory.

This limited warranty shall not apply to any item which shall have been operated in a manner not recommended by the Company nor which shall have been repaired, altered, neglected or used in any way which in the Company's opinion adversely affects its performance and results.

This limited warranty shall not apply to any equipment which has been tampered with in any way or which has been subject to misuse, neglect or accident, or which has the serial number altered, defaced, or removed.

This limited warranty does not apply to exterior finishes, tire, bearings, springs, jacks, couplers or any such items not directly manufactured by Duo Lift Manufacturing Company, Inc., except to the extent of their individual manufacturer's guarantee.

DUO LIFT MANUFACTURING CO., INC. Semi Nurse Trailer

WARRANTY REGISTRATION FORM & INSPECTION REPORT

Customer's Name			Donlor	Name			
City, State, Zip Code		Addres					
		City, S	City, State, Zip Code				
		Phone					
Contact Name			Check	One:	寶		
Serial or VIN Numb	er:		_ Farm (Jse			
Delivery Date	,			ercial Use			
		Semi Nurse T	railer Model	S ;			
		ST3-80K-SSA		_			
I have thoroughly in	structed the buyer	on the above	o-described e	quipment. T	his review inc	cluded	
I have thoroughly in the Operator's Man	ual content, equipn	nent care, adj	justments, sa	afe operation	n, and applica	ble war	
the Operator's Man	ual content, equipn	nent care, adj	justments, sa	afe operation	his review inc n, and applica	ble war	
the Operator's Man	ual content, equipn	nent care, adj	justments, so Dealer's R e been recei	afe operation ep. Signatur	n, and applicare	ble war	
I have thoroughly in the Operator's Man Date The above equipments instructed as to care	ual content, equipn ent and Operator's e, adjustments, saf	ment care, adj	Dealer's F Deen recei and applicab	afe operation ep. Signatu ved by me ε le warranty	n, and applicare	en thore	ughly
the Operator's Man Date The above equipments instructed as to care	ual content, equipn ent and Operator's e, adjustments, saf	ment care, adj	Dealer's F Deen recei and applicab	afe operation ep. Signatu ved by me ε le warranty	n, and applica re and I have be	en thore	ughly

Send Signed Copy of Warranty Registration to One of the Options Below:

Address: Duo Lift Manufacturing Company, Inc. - 2810 38th Street - Columbus, NE 68601

E-Mail: warranty@duolift.com or FAX: (402) 564-5385

DUO LIFT MANUFACTURING CO., INC. Semi Nurse Trailer

WARRANTY REGISTRATION FORM & INSPECTION REPORT

Customer's	Name			Dealer M.				
Address			-					
Address		1		Address				
City, State, Zip Code			City, State, Zip Code					
Phone Numb	oer ()_			Phone No	ımber (_)		
Contact Nan	ne			Check Or	ne:			
Serial or VIN	Number:			Farm Use)			
Delivery Dat	0			Commerc	cial Use			
		Şemi Nu	rse Traile	r Models				
		ST3-80K						
			JUN					
I have thoro	uphly instructed			cribed equ	ipment. T	nis review in	cluded	
the Operator	's Manual conte	the buyer on the a	above-desc e, adjustm	ents, safe	operation	, and applice	able wa	rranty policy.
Date	's Manual conte	the buyer on the a nt, equipment can	above-desc e, adjustm Dec	ents, safe aler's Rep n received	operation Signature	, and applicate	able wa	
Date The above a	's Manual conte	the buyer on the ant, equipment care	bove-desc e, adjustm Dec have bee	ents, safe aler's Rep n received pplicable v	. Signatur I by me a warranty p	, and applica e nd I have be	en tho	

Send Signed Copy of Warranty Registration to One of the Options Below:

Address: Duo Lift Manufacturing Company, Inc. - 2810 38th Street - Columbus, NE 68601

E-Mail: warranty@duolift.com or FAX: (402) 564-5385


Table of Contents

SECTION	DESCRIPTION	PAGE
1	INTRODUCTION	1
2	SAFETY	2
3	SAFETY DECAL LOCATIONS	7
4	OPERATION	8
5	SERVICE AND MAINTENANCE	11
6	TIRE / WHEEL MOUNTING INSTRUCTIONS	14
7	HUB / WHEEL TORQUE SPECIFICATIONS	19
8	STORAGE	21
9	PARTS	22


VEHICLE IDENTIFICATION NUMBER AND LOCATION

Always give your Duo Lift dealer the Vehicle Identification Number (VIN) of your Semi Nurse Trailer when ordering parts or requesting service or other information.

The VIN plate is located where indicated. Please record the number in the space provided for easy reference.

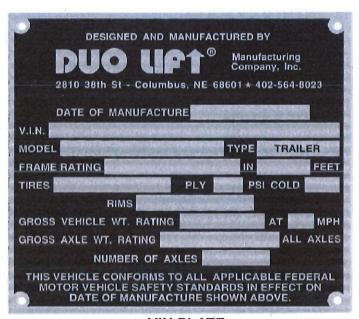

VIN PLATE

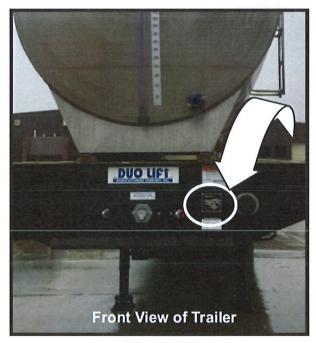

VIN NUMBER LOCATION

Model	ST3-80K-SSA	VIN Number

1 INTRODUCTION

Congratulations on your choice of a new Duo Lift Semi Nurse Trailer to complement your fertilizer operation. This equipment has been designed and manufactured to meet the needs of a discerning fertilizer industry for efficient moving of fertilizer.

Safe, efficient and trouble free operation of your Trailer requires that you and anyone else who will be using or maintaining the Trailer, read and understand the Safety, Operation, Maintenance and Trouble Shooting information contained within this Operator's Manual.



Keep this manual handy for frequent reference and to pass on to new operators or owners. Call your Duo Lift dealer if you need assistance, information or additional copies of the manuals.

OPERATOR ORIENTATION - The directions left, right, front and rear, as mentioned throughout this manual, are as seen from the driver's seat and facing in the direction of travel.



2 SAFETY

SAFETY ALERT SYMBOL



Why is **SAFETY** important to you?

3 BIG Reasons

Accidents Disable and Kill Accidents Cost Accidents Can Be Avoided

SIGNAL WORDS:

Note the use of the signal words **DANGER**, **WARNING** and **CAUTION** with the safety messages. The appropriate signal word for each message has been selected using the following guidelines:

DANGER - An immediate and specific hazard which WILL result in severe personal injury or death if the proper precautions are not taken.

WARNING - A specific hazard or unsafe practice which COULD result in severe personal injury or death if proper precautions are not taken.

CAUTION - Unsafe practices which COULD result in personal injury if proper practices are not taken, or as a reminder of good safety practices.

2.1 SAFETY



General Trailer Safety

Check Federal, State and Local Safety Codes & Regulations for Full Compliance

- This Trailer is ABS Equipped and Requires Continuous Electrical Power to the Auxiliary / Blue Circuit
- 1. DO NOT Load Trailer Over Recommended Capacity
- 2. Check Lights and Reflectors Before Towing
- 3. Examine Tires For Wear and Correct Pressure
- 4. Check Wheel Lug Bolts For Torque Tightness
- Inspect and Check Brakes For Correct Operation
- 6. Raise Jack Before Moving Trailer
- 7. Always Secure Load and Check During Trip
- 8. Maintain Proper Distance For Stopping
- 9. Be Careful When Backing Trailer
- 10. When Parking, Block Wheels if on Slope
- 11. Use Precaution When Operating Any Equipment

2.2 TRAILER SAFETY

YOU are responsible for the SAFE operation and maintenance of your Duo Lift Trailer. YOU must ensure that you and anyone else who is going to operate, maintain or work around the Trailer be familiar with the operating and maintenance procedures and related SAFETY information contained in this manual. This manual will take you step-by-step through your working day and alerts you to all good safety practices that should be adhered to while operating the Trailer.

Remember, **YOU** are the key to safety. Good safety practices not only protect you but also the people around you. Make these practices a working part of your safety program. Be certain that **EVERYONE** operating this equipment is familiar with the recommended operating and maintenance procedures and follows all the safety precautions. Most accidents can be prevented. Do not risk serious injury or death by ignoring good safety practices.

Trailer owners must give operating instructions to operator's or employee's before allowing them to operate the Trailer, and at least annually thereafter per OSHA (Occupational Safety and Health Administration) regulation 1928.57.

The most important safety device on this equipment is a **SAFE** operator. It is the operator's responsibility to read and understand **ALL** Safety and Operating instructions in the manual and to follow them. All accidents can be avoided.

A person who has not read and understood ALL operating and safety instructions is not qualified to use the equipment. An untrained operator exposes himself and bystanders to possible serious injury or death.

Do not modify the equipment in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the equipment.

Duo Lift Manufacturing Company Inc., follows the general Safety Standards specified by the following agencies:

American National Standards Institute (ANSI) American Society of Agricultural and Biological Engineers (ASABE)

Occupational Safety and Health Administration (OSHA)

Anyone who will be operating and/or maintaining the Trailer must read and clearly understand ALL Safety, Operating and Maintenance information presented in this manual.

2.3 GENERAL SAFETY

- SEE INTRODUCTION Page 1 for contact information.
- Read and understand this Operator's Manual and all safety signs before operating, maintaining, adjusting or repairing the Trailer.
- Have a first-aid kit available for use should the need arise and know how to use it.
- Have a fire extinguisher available for use should the need arise and know how to use it.







- Wear appropriate protective gear.
 This list includes but is not limited to:
 - Protective chemical goggles
 - Respirator or filter mask
 - Neoprene gloves
 - Water repellent clothing
 - Rubber boots
 - Supply of fresh water as required by Safety Standard Regulations



- 6. Do not allow riders on the Trailer.
- Wear suitable ear protection for prolonged exposure to excessive noise.



- 8. Clear the area of by standers, especially small children, before moving the unit.
- **9.** Review safety related items with all personnel who will be operating or maintaining the Trailer.

Think SAFETY! Work SAFELY!

2.4 OPERATING SAFETY

- This Trailer is ABS equipped and requires continuous electrical power to the auxiliary / blue circuit.
- 2. Read and understand the Operator's Manual and all safety signs before operating, maintaining, adjusting or servicing.
- 3. Read and follow the chemical manufacturers' instructions on the handling, storage and disposal of chemicals before starting.
- Agricultural chemicals are among the most toxic substances known to man. Minute quantities can be harmful to humans, contaminate clothing, machinery, the workplace and the environment. Follow the chemical manufacturers' instructions exactly.
- 5. Do not breathe, touch or ingest chemicals. Always wear protective clothing and follow safe handling procedures.
- 6. Do not allow riders on the Trailer.
- Make sure you are in compliance with all local regulations regarding transporting equipment on public roads and highways.
- 8. Keep hands, feet, hair and clothing away from all removing parts.
- 9. Clear the area of bystanders, especially small children, before moving.
- Shift towing unit to a lower gear before going down steep downgrades to use engine as retarding force. Keep towing vehicle in gear at all times.
- 11. Maintain proper brake setting at all times.
- Do not attempt to operate this equipment under the influence of drugs and/or alcohol.
- Review safety instructions with all users annually.
- Support the Trailer with blocks or safety stands when changing tires or working beneath it.
- 15. Follow good shop practices:
 - Keep service area clean and drv.
 - Be sure electrical outlets and tools are properly grounded.
 - Use adequate light for the job at hand.



2.5 TIRE SAFETY

- Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. See Section 6
- Do not attempt to mount a tire unless you have the roper equipment and experience to do the job.
- 3. Have a qualified tire dealer or repair service perform required tire maintenance.
- Always order and install tires and wheels with the appropriate capacity to meet or exceed the anticipated weight to be placed on the equipment.
- 5. It is recommended to install wheels with valve stems to the outside of the wheels.

2.6 SAFETY SIGNS

- Keep safety signs clean and legible at all times.
- 2. Replace safety signs that are missing or have become illegible.
- 3. Replaced parts that displayed a safety sign should also display the current sign.
- Safety signs are available from your Duo Lift Dealer Parts Department or the factory at no cost.

How to Install Safety Signs

- Be sure that the installation area is clean and dry.
- Decide on the exact position before you remove the backing paper.
- Remove the smallest portion of the split backing paper.
- Align the sign over the specified area and carefully press the small portion with the exposed sticky backing in place.
- Slowly peel back the remaining paper and carefully smooth the remaining portion of the sign in place.
- Small air pockets can be pierced with a pin and smoothed out using the piece of sign backing paper.

2.7 **DEFINITIONS**

GCVW

Gross Combined Vehicle Weight (GCVW) is the total combined weight of a fully loaded vehicle, including passengers, payload and everything in tow.

GVW

Gross Vehicle Weight (GVW) is the total weight of a fully loaded vehicle, including passengers and payload but excluding all towing.

GVWR

Gross Vehicle Weight Rating (GVWR) is the maximum number that the GVW <u>or</u> GTW should never exceed. GVWR is applied to trailers as well as vehicles, but you may see this rating referred to as the **Maximum Loaded Trailer Weight**.

Curb Weight

The weight of a vehicle without any passengers or cargo, but including all necessary fuel, fluids and standard equipment.

Understanding Gross Vehicle Weight Rating


Knowing and understanding GVWR is important to towing because it tells you explicitly the maximum weight of passengers and cargo you can safely carry. GVWR is the total combined weight of truck, including all passengers, fuel, fluids and cargo. GVWR is constant and does not change, regardless of what you tow. It's engineered in when the vehicle is manufactured.

3 SAFETY SIGNS AND LOCATIONS

The types of sign and locations on the equipment are shown in the illustration below. Good safety requires that you familiarize yourself with the various Safety Signs, the type of warning and the area, or particular function related to that area, that requires your SAFETY AWARENESS.

Think SAFETY! Work SAFELY!



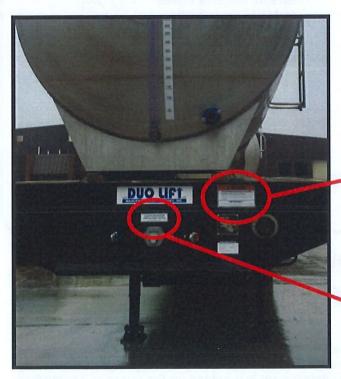

WARNING

TIRE MOUNTING EXPLOSION HAZARD

To prevent serious injury or death:

- Serious injury or death may result from an explosion of the tire/rim assembly due to improper mounting procedures.
- Only specially trained personnel should mount these tires. Standard internal tire pressure must be ensured and the tire pressures should be checked regularly. Always inflate tire/rim in a safety cage or restraining device and always use remote-controlled clip-on air hose.
- Never exceed 40 P.S.I. to seat tire beads.
- After seating tire beads, inflate to pressure recommended by tire manufacturer.
- Never put a flammable substance into a tire/rim assembly and lights to seat tire beads.
- Never weld or braze or apply heat to rim.
- Follow fire manufacturers recommendations.
- Never stand, lean or reach over tire/rim assembly during inflation. Special procedures for steel radial tires
- Keep your tires dry.

 Moisture trapped inside tires can cause damage. Store in a dry area.

 Dry interior before mounting. Inflate with dry air.

DUO LET MANUFACTURING COMPANY, INC.



WARNING

DETACHMENT/RUNNAWAY HAZARD

TO PREVENT SERIOUS INJURY OR DEATH:

- ASSURE FIFTH WHEEL LOCKING LEVER IS IN LOCKED POSITION.
- TEST CONNECTION BY LOCKING TRAILER BRAKES AND PULLING FORWARD.

IMPORTANT

RETRACT LANDING GEAR TO UPWARD POSITION BEFORE TRANSPORTING

DUO LIFT MANUFACTURING COMPANY, INC.

THIS TRAILER IS ABS EQUIPPED AND **REQUIRES CONTINUOUS ELECTRICAL POWER TO THE AUXILIARY / BLUE CIRCUIT**

DUO LIFT MANUFACTURING COMPANY, INC.

REMEMBER - If Safety Signs have been damaged, removed, become illegible or parts replaced without signs, new signs must be applied. New signs are available from your authorized dealer or from Duo Lift at no cost.



OPERATION SAFETY

- Read and understand the Operator's Manual and all safety signs before operating, maintaining, adjusting or servicing.
- Assure fifth wheel locking lever is in locked position.
 Test connection by locking trailer brakes and pulling forward.
- This trailer is ABS equipped and requires continuous electrical power to the auxiliary / blue circuit.
- Read and follow the chemical manufacturers' instructions on the handling, storage and disposal of chemicals before starting.
- Agricultural chemicals are among the most toxic substances known to man. Minute quantities can be harmful to humans, contaminate clothing, machinery, the workplace and the environment. Follow the chemical manufacturers' instructions exactly.
- Do not breathe, touch or ingest chemicals.
 Always wear protective clothing and follow safe handling procedures.
- 7. Do not allow riders on the Trailer.
- Make sure you are in compliance with all local regulations regarding transporting equipment on public roads and highways.
- 9. Keep hands, feet, hair and clothing away from all moving parts.
- 10. Clear the area of bystanders, especially small children, before moving.

- Retract landing gear to upward position before transporting.
- Shift towing unit to a lower gear before going down steep downgrades to use engine as retarding force. Keep towing vehicle in gear at all times.
- 13. Maintain proper brake setting at all times.
- Do not attempt to operate this equipment under the influence of drugs and/or alcohol.
- Review safety instructions with all users annually.
- Support the Trailer with blocks or safety stands when changing tires or working beneath it.
- 17. Follow good shop practices:
 - Keep service area clean and dry.
 - Be sure electrical outlets and tools are properly grounded.
 - Use adequate light for the job at hand.





Always refer to the Towing Vehicle owners manual trailer towing section to determine the vehicles towing capacity and to ensure compatibility and maximum safety.

4.1 TO THE NEW OPERATOR OR OWNER

The Duo Lift Trailer is designed for the mounting of fertilizer or chemical containers to it. It efficiently carries the containers and chemical on the road or in the field.

Owner's Responsibility:

It is the responsibility of the owner or operator to read this manual and to train all other operators before they start working with the Trailer. Follow all safety Instructions exactly. Safety is everyone's business. By following recommended procedures, a safe working environment is provided for the operator, bystanders and the area around the work site. Untrained operators are not qualified to use the equipment.

Many features incorporated into this Trailer are the result of suggestions made by customers like you. Read this manual carefully to learn how to operate the Trailer safely and how to set it to provide maximum efficiency. By following the operating instruction in conjunction with a good maintenance program, your Duo Lift Trailer will provide many years of trouble-free service.



Each trailer is equipped with lanyards for each rear axle tank.

REMEMBER – If Safety Signs have been damaged, removed, become illegible or parts replaced without signs, new signs must be applied. New signs are available from your authorize dealer or from Duo Lift at no cost.

4.2 TRAILER BREAK-IN

Although there are no operational restrictions on the Trailer when used for the first time, it is recommended that the following mechanical items be checked:

A WARNING

DETACHMENT/RUNNAWAY HAZARD

TO PREVENT SERIOUS INJURY OR DEATH:

- · ASSURE FIFTH WHEEL LOCKING LEVER IS IN LOCKED POSITION.
- TEST CONNECTION BY LOCKING TRAILER BRAKES AND PULLING FORWARD.

IMPORTANT

RETRACT LANDING GEAR TO UPWARD POSITION BEFORE TRANSPORTING
DUG LIFT MARIUFACTURING COMPANY, INC. ECOSOTI

- A. This Trailer is ABS equipped and requires continuous electrical power to the auxiliary / blue circuit.
- B. After traveling for 1/2 hour or going 5 miles (8 km):
 - Tighten wheel bolts to their specified torque levels. Refer to Section 7.
 - Check all nuts, bolts and other fasteners. Tighten to their specified torque level.
 - Check tire pressure. Bring to specified level.
 - 4. Check the container mounting hardware. Tighten to the specified torque.
 - Check hubs for proper tightness. The spindle castle nuts are set at the factory but may need additional adjustment to ensure the bearings are seated properly.
- C. After operating for 5 and 20 hours or 50 and 200 miles (80 and 320 km):
 - 1. Repeat items 1 through 4 of Section A.
 - 2. Then go to the regular service schedule as outlined in the Maintenance Section.
- D. Repeat the torquing of wheel bolts after 5, 50 and 200 miles (8, 80 and 320 km) or whenever a wheel is removed and installed on the Trailer.

4.3 PRE-OPERATION CHECKLIST

Efficient and safe operation of the Trailer requires that each operator reads and understands the operating procedures and all related safety precautions outlined in this section. A pre-operation checklist is provided for the operator. It is important for both the personal safety and maintaining the good mechanical condition of the Trailer that this checklist is followed.

Before operating the Trailer and each time thereafter, the following areas should be checked off:

- Check the tire pressure. Bring to specified level.
- Check the wheel bolts. Tighten to their specified torque. Refer to Section 7.
- Check the container mounting hardware. Be sure it is tightened to its specified torque.
 Refer to Section 5.2.1.
- Check the container and accessory equipment. Be sure that all components are in good condition and working properly.
- 5. If transporting during times of limited visibility or dusk, install extra lights or use pilot vehicles.
- "The employer shall instruct each employee in the recognition and avoidance of unsafe conditions and the regulations applicable to his work environment to control or eliminate any hazards or other exposure to illness or injury." Ref: 29CFR 1929.20 (b) (4) (a) (2)

4.4 TRANSPORTING

Ŵ

TRANSPORT SAFETY

- Make sure you are in compliance with all local regulations regarding transporting equipment on public roads and highways.
- 2. This Trailer is ABS equipped and requires continuous electrical power to the auxiliary / blue circuit.
- 3. Do not allow anyone to ride on the Trailer or towing vehicle during transport.
- 4. Make sure all lights and reflectors that are required by the local highway and transport authorities are in place, are clean and can be seen clearly by all overtaking and oncoming traffic.

When transporting the Trailer, review and follow these instructions:

- It is the responsibility of the customer to know the lighting and marking requirements of the local highway authorities. Install reflectors and extra lights as required to comply with the regulations.
- Retract landing gear to upward position before transporting.
- 3. Clean the reflectors and check that the lights are in good working order before starting.
- 4. If transporting during times of limited visibility or dusk, install extra lights or use pilot vehicles.
- 5. Do not allow riders on the Trailer.
- 6. Never exceed a safe travel speed. Slow down for corners and rough road conditions.

Always shift to a lower gear when going down hills to use the engine as a retarding force.